



## INSTRUCTION MANUAL FOR SIM CARDS OKI B2500/B4500, Ricoh SP1000, Xerox 3100

1. When the toner in the cartridge is near the end there will be a message „TONER NEAR END“ and when the toner is completely empty there will be a message „TONER EMPTY REPLACE <OK>“

2. After refilling the new cartridge put the card as shown on the picture

3. There will be a message:

**CHANGE TONER?  
YES=OK - NO=C**

4. Press OK and there will be a message:




**OPEN FRONT COVER  
REPLACE TONER**

5. Insert the cartridge as shown on the picture.

6. Close the front cover and there will be a message:

**HAVE YOU CHANGED  
THE TONER? <OK>**

7. Press OK and wait until the new cartridge is initialized and after viewing the message "REMOVE CARD" please remove the card.

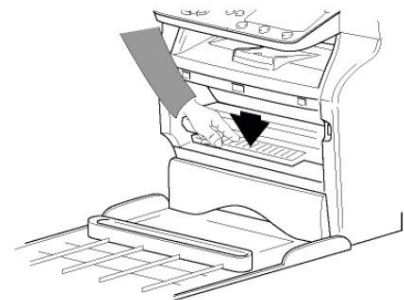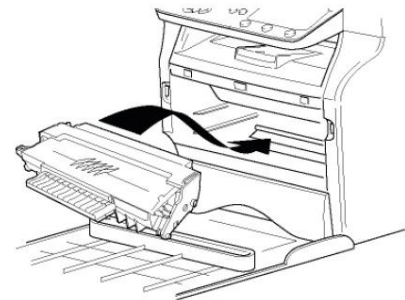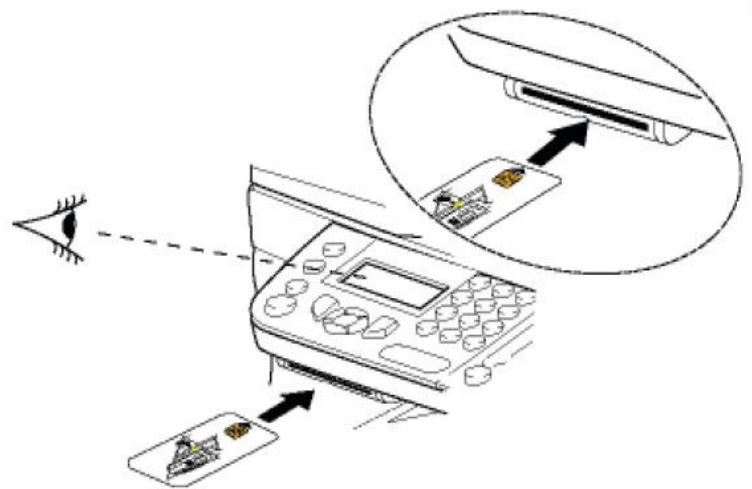

Please use the card for a new cycle after the toner is completely empty.